

ROLINE Mini Patchpanel, Cat.6A/Cl.EA, 0.5U, 6x RJ45 ports, shielded, black

26.11.0299

Installation Instruction

1. Cut the cable sheath 45mm from the end.



2. Pull off the front plastic sheath.



3. Cut the braid at 15mm. Push back the braid above the cable sheath.



4. Insert the cable into the cable clamp and tighten it hand-tight without squeezing the cable.




5. Cut the shielding foil to length.

IMPORTANT: The LSA contacts are printed with color code 568B.

T568A



T568B

IDC(KRONE)



- Pin 1 White/Green
- Pin 2 Green
- Pin 3 White/Orange
- Pin 6 Orange
- Pin 7 White/Brown
- Pin 8 Brown
- Pin 5 White/Blue
- Pin 4 Blue

- Pin 1 White/Orange
- Pin 2 Orange
- Pin 3 White/Green
- Pin 6 Green
- Pin 7 White/Brown
- Pin 8 Brown
- Pin 5 White/Blue
- Pin 4 Blue

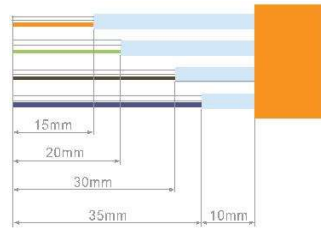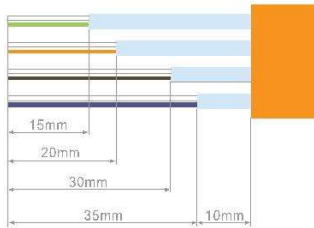


6. Cut and remove the pair shielding with side cutters.

IMPORTANT: Bring the pair shielding up to the contact.



7. Connect the wires starting from clamp 8 using the LSA connection tool.

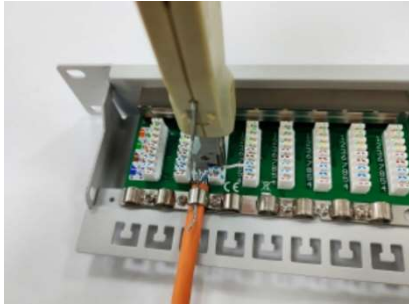

8. Apply the cable ties for strain relief and snap in the cover.

